Z515 Might Plus 2
User Manual

Content

ts 1
List 2
Specification ..... **Error! Bookmark not defined.**
your device 4
aving 4
ng to a PC 5
ng a USB device 5
the MicroSD card 6
ng to the Network 6
..... 7
de 7

Panel and Reboot 7
n of Touch Panel ..... **Error! Bookmark not defined.**
reen 10
f Wallpaper 11
tcut on Home screen 11
get in Home Screen 11
the shortcut on Home screen 11
ortcut on Home screen 11
on screen 12
ons 12
webpage 13
..... 14
outgoing message 15

ıyer 16
ıyer 16
ager 18
ɔ 20
..... 21
ıg 22
..... 22
ly used settings SIM Card Management 23
..... 24
ɔtification 25
..... 26
ɾ 26

..... **Error! Bookmark not defined.**
ne out 26
..... 28
..... 28
..... **Error! Bookmark not defined.**
& Input 28
nd reset 29
..... 29
ne 29
d power on and off 29
ility 30
one ..... **Error! Bookmark not defined.**
Shooting 32

l includes security measures and correct operating methods. For personal safety, please
o read this manual before using our product.
hine adopts capacitive touch screen, you can just touch it by finger or click with capacitive
ation. (Never use the sharp objects to click the screen, or the touch screen may be

ut the device at any high temperature, high humidity or dusty area.
rop or crash the device to prevent the violent impacting between the display and the
ouch screen.
hoose the suitable volume and never make it too loud. If you feel uncomfortable please
ıe volume or stop to use the device.
harge if you meet below situations:
attery on the battery icon. B. The system turns off automatically.
】: DO NOT use the unofficial charger otherwise it may damage the device and the
assume no liability for such damage. Please contact with our agent if you need the
ptor.
arging process，the device may warming (not too hot), this is normal, and it won't effect
functions.
ismantle this device by yourself, and do not polish it with alcohol, or any chemicals.
se this device where electronics is forbidden, such as on the airplane or gas station.
se this device while walking across the road or driving to avoid traffic accident.
support needed for this device please contact the company or the authorized distributor.
uthorized dismantling of the device will make the warranty null and void.

ck box for the following items

nual
e
daptor
ble

ɔreen：	You can click and drag in the touch screen.
amera：	You can take photos and videos etc.
ne jack:	3.5mm standard earphone jack.
JSB:	For data transfer or charge issue.
ımera：	For taking photo or video usage Will flash when taking pictures.
ɪ:	provide the auditory feedback according to the state of device
D/TF card：	Micro SD/TF card slot.
‹ey :	Press and hold the button for 2 seconds to power on/ off the device, or press button once to turn on the screen from sleep mode .
e up key：	Turn up the volume
e down key:	Turn down the volume
ard:	Insert the SIM card

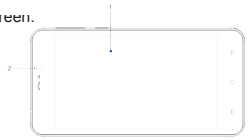

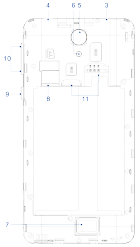

: The device will turn off automatically if the battery is low.

our device :

ge the device for ten hours for the first time usage.

ıu can recharge the device if needed.

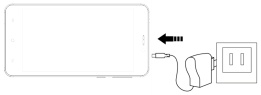

se the official charger to avoid any damage.

al for the device's surface to become warm during
or long periods of use.

ıarge/release it if you do not use this set for a long time once a month
leep discharge.

ıge caused by battery over-consuming is not included in the warranty.

ring

tery running life, please see below key points. With below suggestions, battery can run
after fully charged each time.

vice is not in use, press power button once to sleep mode.

e applications when not in use.

/LAN when not in use

e application sync

orter time for display backlight

brightness of display

nect with PC by USB cable attached with the device
sfer issue.

e to the USB mode after the PC and
connected, now you may transfer
al data between the PC and the device
on.

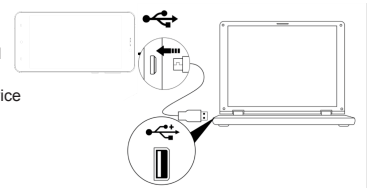

a USB device:

ces are supported, such as a keyboard,
gh the USB port.
a files on USB storage with installed
or video applications.
: Before removing this USB storage, make
evice is not accessing data from the USB

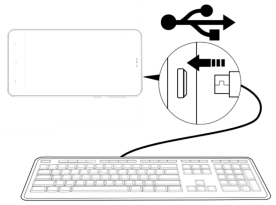

tall a Micro SD card to expand your device's
ce.
e supports Micro SD card up to 32GB capacity.
Micro SD card as shown.
nsure that the Micro SD card is inserted all the
ay into the card slot.
: Before removing this card, make sure your device
is not accessing data on the card.

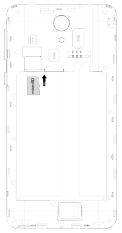

to the Network:
ess setup:
tting interface and turn on the WLAN.
vill automatically search any accessible
ess networks.

old the power key for 2 seconds, device will start up opening screen and the Android
ctivating and enter the main screen.

e
is on, press power key once and it goes to sleep mode. The screen is now on standby
ow battery consumption. To wake up device, press the power key again.

nd Reboot
re not using the device, press and hold the power key for 2 seconds, the screen will
options: “Power off” and “Reboot” .Select Power off ,the phone will turn off while
eboot, it will restart.

finger or capacity panel pen to touch once, so as to select or activate function, or select
n on applications.

de up, down, left or right for fast scrolling browsing page and display screen

g an icon and relocate the position

Out --Use two fingers at same time on touch panel, to enlarge or to shrink the ale.

earch 2 Google voice search 3 Back key
y 5 Menu key 6 Status bar
App 8 Enter apps interface

ge of wallpaper

lenu key on home screen , choose wallpaper
reloaded wallpapers or picture as wallpaper
et wallpaper" to confirm

hortcut on Home screen

application menu, tap and hold the icon of the application
e icon to home screen where you want to place and release

Widget in Home Screen

enu key on Home screen
WIDGETS" to enter widget screen
ignated widget and locate it in home screen
Some widgets is linked to internet service, be careful it will occur data cost
gets might only be used in certain countries or under assigned service providers

ate the shortcut on Home screen

application icon and move
on to the designated position

el shortcut on Home screen

ess one icon of application on home screen until you see "X Remove" icon
on top of home screen
on into the "X Remove"icon
con changes to red, let go

ne main screen, check device status and set up below options :

Icon	Description
WLAN signal	WLAN connection, icon is full under strong signal
Battery	Show the status of battery or if device is being charged
USB Connection	To show if USB port is connected
Soft keyboard	Turn on soft keyboard, for word typing
Screen shot	This icon appear after taking screen shot

ns

rowsing

ernet and bookmark the website

Web browser and bookmark might be different in different countries or different service

)plication menu, select "Browser" icon
s certain webpage, select URL and input website address, and select "confirm"
)w browsing options:

dress: On top of interface, you can tap to input URL
evious page：Tap this icon：
ext page: Tap this icon:
w tabs: Tap this icon:
okmarks/History/Saved pages: Tap this icon:

sing webpage, click Menu key to enter browser settings

pplication menu, click ”Browser”

ookmark current visited history
ebpage

eceive email

of email account
plication menu and click ”Email”
ail address and password
xt step (for personal email account) or manual setting (for commercial email account)
nd input the requested setting

account setting, message will be received in device. For more than one email account,
l account for operation, to receive and send out message.

lication menu and select ”Email” →
ecipients；Manual input email address，use ”;” or ”,” to separate more than one
s
ubject
essage in content
for attachments

 and send out message
If user is offline，message cannot be sent out
email message
count, user can check downloaded message, go online to check new messages.

ɔ in application menu.
ıe categorized by artists, album and play list.
ıy all music inside “Songs” interface. Click the song and it will play automatically.

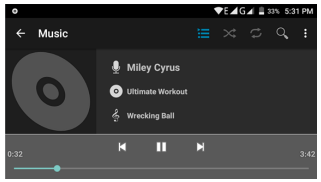

er

ɔs” in application menu.
ɐr will search for all supported video files in the device, click the designated video

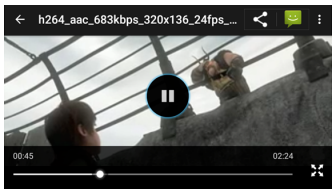

n front camera can take picture and video file.

picture
camera" in application menu, device is default at picture taking

picture，click " "

ke the photos, it can be zoom
y two finger

Video shooting

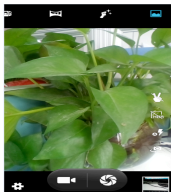

t recording automatically

” again to stop

er

nain menu, click the file manager icon to start this application. You can view the
e phone storage or TF card by File Manger.

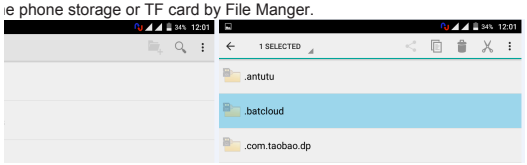

A B

:, delete, and rename the files and folder: choose the file or folder, long press the file or
ter into the interface as Picture 9.4; you can operate the file or folder.
ne file or folder you copy or cut: in the catalogue you want to paste, choose

right top, as Picture

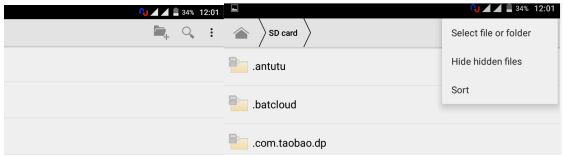
34% 12:01
SD card
.antutu
.batcloud
.com.taobao.dp
34% 12:01
Select file or folder
Hide hidden files
Sort

C D

in the main interface to enter the FM radio interface:

this icon to start or stop FM:

this icon to search channels:

this icon to start FM recording:

to scan FM frequency

need to insert earphone before activate the FM radio, otherwise it cannot function.

e application procedure

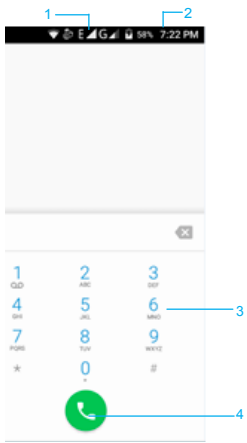

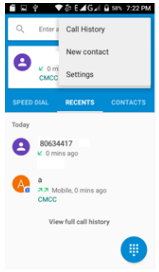

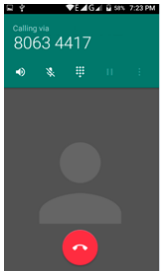

1.Signal icon

2.Status bar

3.Dial Keypad

4.Dial key

main menu, choose application procedure.

new message": tap this icon:

umber or tap this icon to add contacts:

nessage and tap this icon to add

,sound and so on:

nd icon to send out the message:

acts in the main interface, enter into
st.

ntact: click button, enter into search function

ct: click button, enter into add
face.

Management

ıg application in main menu; choose SIM cards

Wi-Fi

n WLAN，the system will scan the WLAN signal
tomatically. Meanwhile, users could add network
ıs well.

→ BT

arch device on the top right, then device will search
/ice nearby automatically.

arch to get BT device, it will popup match
ndow, click match.

ıtching successfully, find the device name you
erate, icon, and enter into interface

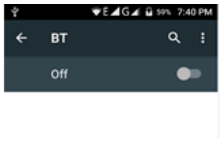

ta usage

mode

ode can quickly turn off wireless communication,
pen airplane mode, WLAN and GSM can't read any
chine will resume to previous state when you close
ode.

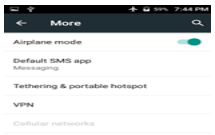

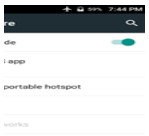

Tethering and portable hotspot

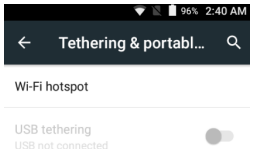

' Sound &notification
set different profile to match with your needs.

: The device will remind you have incoming
vibrate if you choose this option.

ume: Drag the icon to the left or right to adjust the

ngtone
ne ringtone to choose incoming voice/video call

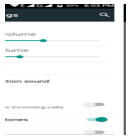

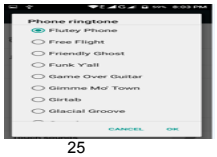

ngs application.
lay, click wallpaper
hoose different wallpaper as your preference
me options:
---Gallery/ Live Wallpaper/ Wallpapers

ng application
lay, click Font size, there are four different
nall/Normal/Large/Extra large

Out
ng application.
lay,
een Time Out".
een standby time settings, choose the
you want to set

default storage. View SD card and Phone space.

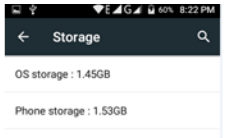

ick setting function, choose
can view battery usage situation.

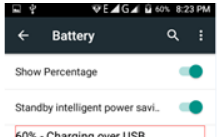

etting procedure in the
n procedure list.

pplication, after entering, you can
l delete installed applications

input
s, choose language &input,
uage to match with your needs.

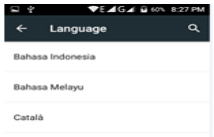

l Reset

› my data, when WLAN is connected and
‹ account, system will copy your data into
er. If you wish to reset factory setting,
restore factory reset.

ıg application.
›unts
mail type you want to login.
ccessfully, sync function will auto open.

ternet is connected, turn on- Automatic
the device can obtain the real date and
‹ internet.

power on and off

setting application.
eduled power on and off selection.
as right Picture

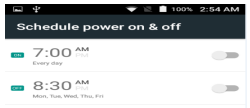

e allow the user to set some specific function
h their needs like below:

t
ake system font become large.

ver key to end call
ess power key to end call, but won't sleep.

d hold delay

roid version, and version information.

tus to view battery state, battery level,
IMEI information, IP address and so on

startup of phone is slow
startup need to install the pre-installed application software, the lead time is around 2-3
the startup afterwards will be much quicker.

an't connect WLAN
·e the wireless router of internet service can work in normal.
ıe device and wireless router in certain distance, and no wall or other barrier between
sure the user name and password both correct.

eels hot
any application procedures are used in meanwhile, or the brightness of screen open to
or under charging, device may become warming. It is normal.

n't be set or Registration of application procedure.
our internet is well connected.
·e your email setting way is correct.
ır system time and local time consistent.
tem is abnormal and can't work.
ıu install some third party application procedure, it may cause abnormal work, you can
set key (next to power port) to reset the system.
ıpage can't be opened
e keep the distance in effective range.
e restart WLAN and try again.

/orks terribly slow sometimes
ıal phenomenon. Please turn off some application you don't need in advanced task
ment, or uninstall some third party application to release more system resources.